



BANG & OLUFSEN

1. Connect cable in IR eye

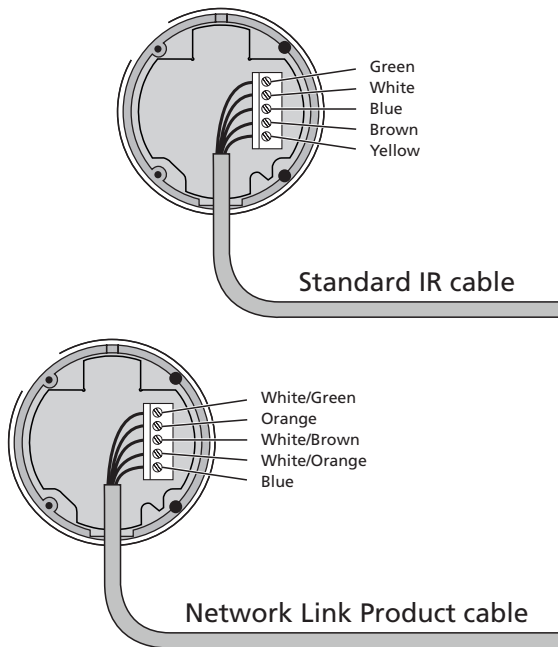

2. Connect the RJ45 plug into the BeoLink Converter NL/ML

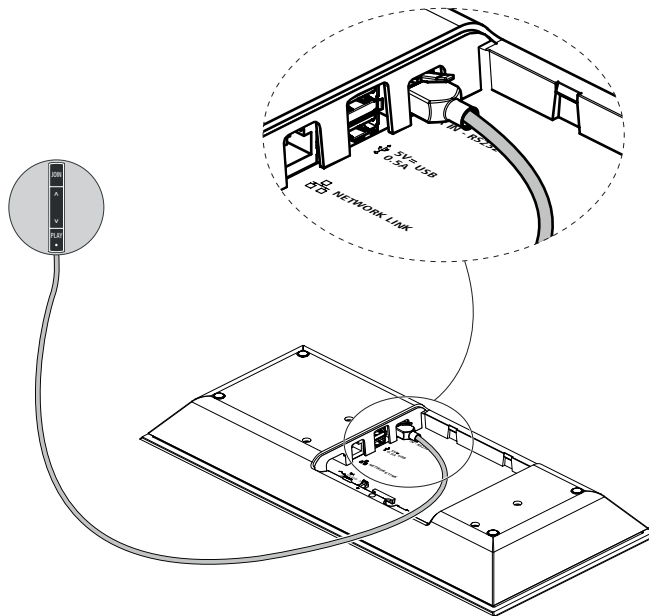

3543620 06-13

IR eye for BeoLink Converter NL/ML