



3a

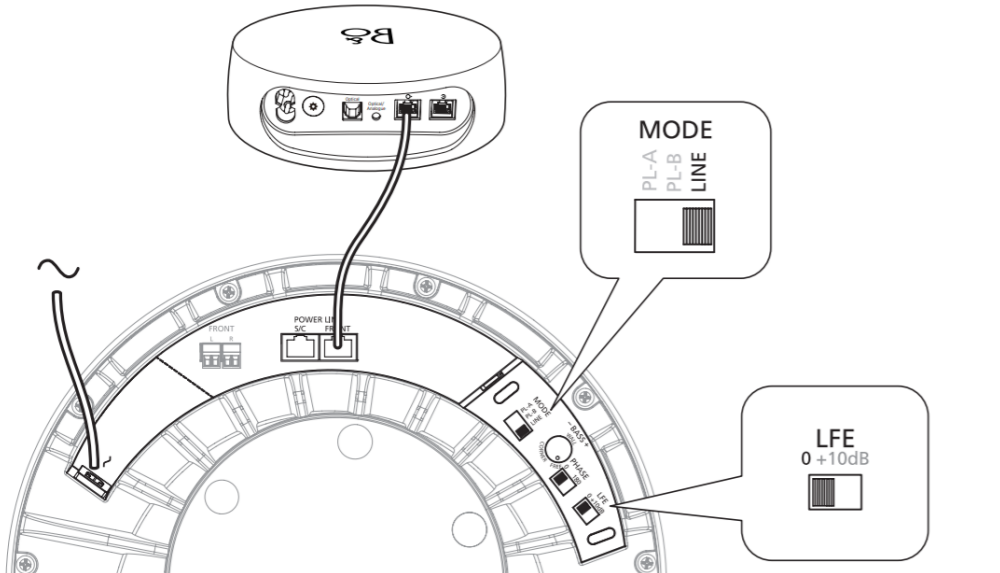

D	BANG & OLUFSEN		NON-BANG & OLUFSEN	
MODE	 MODE PL-A PL-B LINE AMP	 MODE PL-A PL-B LINE AMP	 MODE PL-A PL-B LINE AMP  AV Receiver using amp outputs	 MODE PL-A PL-B LINE AMP  AV Processor using pre-outs
LFE	 LFE 0 +10dB	 LFE 0 +10dB	 LFE 0 +10dB	 LFE 0 +10dB
SPEAKER TYPE SETUP IN TV/RECEIVER	<b>SPEAKER TYPE</b> PL 1 LEFT: BEOLAB14 SUB PL 1 RIGHT: BEOLAB14 PL 2 LEFT: BEOLAB14 PL 2 RIGHT: BEOLAB14 PL 3 LEFT: BEOLAB14 PL 3 RIGHT: BEOLAB14		LEFT FRONT: BEOLAB 5 RIGHT FRONT: BEOLAB 5 LEFT REAR: BEOLAB 5 RIGHT REAR: BEOLAB 5 SUBWOOFER: YES	FRONTS: LARGE REARS: LARGE CENTRE: LARGE SUBWOOFER: YES
SPEAKER ROLE	<b>TV AS CENTRE</b> TV: CENTRE FRONT BEOLAB14 SUB: SUBWOOFER BEOLAB14: NONE BEOLAB14: LEFT FRONT BEOLAB14: RIGHT FRONT BEOLAB14: LEFT SURROUND BEOLAB14: RIGHT SURROUND			

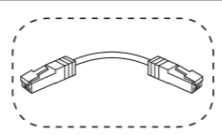