

## Beolink 1000

*The Beolink 1000 gives access to all the primary functions in a Bang & Olufsen system, including audio and video products and light control.*

*However, it is optimized for use with one-way communicating products, for example the Beosystem 8500 or 3500, or the Beovision LS TV.*

*This user's guide gives a general introduction into the use of the Beolink 1000 in conjunction with any compatible Bang & Olufsen audio or video system.*

*For detailed operating instructions, please refer to the user's guide for the appropriate audio or video system.*

## Contents

4	Switching on
6	Search functions
8	Selecting specific numbers
10	Picture and sound control
	Switching off
12	Teletext
14	On-screen menus

## Switching on

The upper group of buttons is used to switch on your video or audio system, or the lights.

 
- TV** Switches on to a TV program
- SAT** Switches on to a satellite program
- V.TAPE** Plays the tape in the video tape recorder
- MENU** Calls up the on-screen menus (TV menu, satellite menu or video tape recorder menu)
- RADIO** Switches on to a radio program
- CD** Plays the disc in the CD player
- A.TAPE** Plays the tape in the audio tape recorder
- PHONO** Plays the record on the turntable
- LIGHT** Gives access to controlling the lights in your Bang & Olufsen Light Control system

Use the number buttons to select the light picture you want to switch on

Use ▲ or ▼ to turn the lights up or down

### Special functions:

- LINK** Used only in a room with X-tra speakers or X-tra TV
- RECORD** Press twice to start recording the current audio or video source
- SHIFT** Accesses special functions

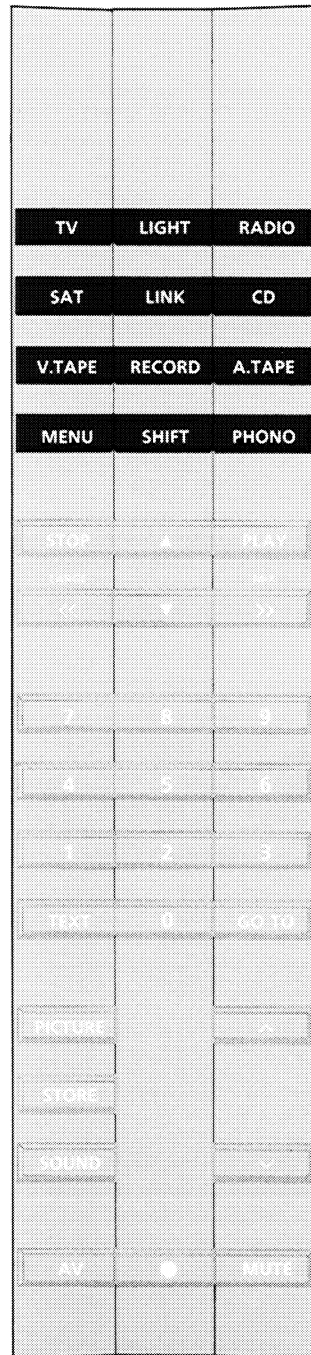

## Search functions

The next group of buttons is used to search for specific passages on your tapes (audio or video) or on your CD's.

 
It also enables you to operate the on-screen menus (see page 14).

If you have called up teletext, you will also use these buttons to control your teletext pages (see page 12).

-  Searches backward
-  Searches forward
-  Stops playing or recording
-  Resumes playing
-  Steps to the next track
-  Steps to previous tracks

Press once to return to the start of the current track. Press twice to step to the previous track

The step buttons can also be used to step to other TV, satellite or radio programs

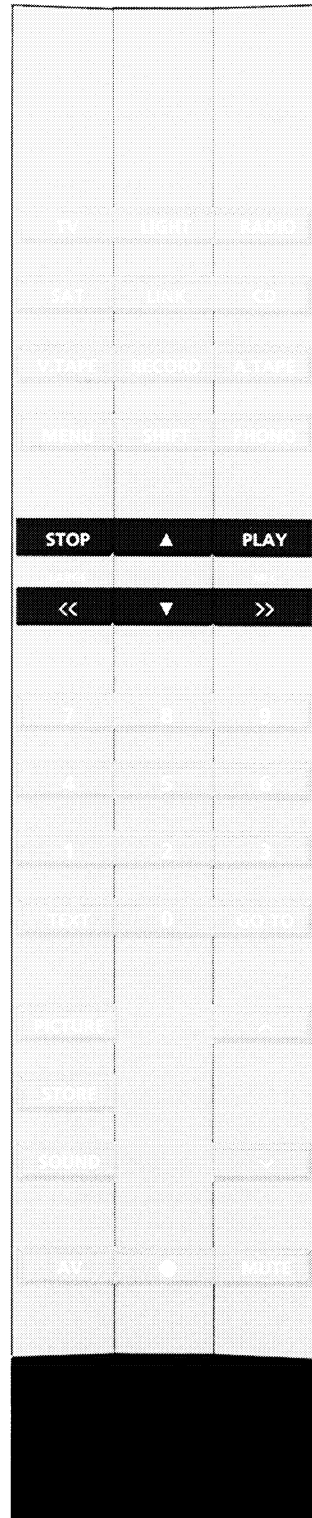

## Selecting specific numbers

*The third group of buttons is your keyboard!*

**0** You will use the number buttons to key in figures,  
through

 
**9** > for example to select specific program numbers or tracks, or to fill in numbers, for example if you are using the on-screen menus to program your video tape recorder

**TEXT** Calls up teletext

*Use the number buttons to select other memory pages*

*See page 12 for further details of how to use the teletext functions*

**GO TO** Press GO TO, then the number buttons to call up a specific teletext page, to find a specific counter position on your tape, or to access a specific frequency (TV, satellite, radio)

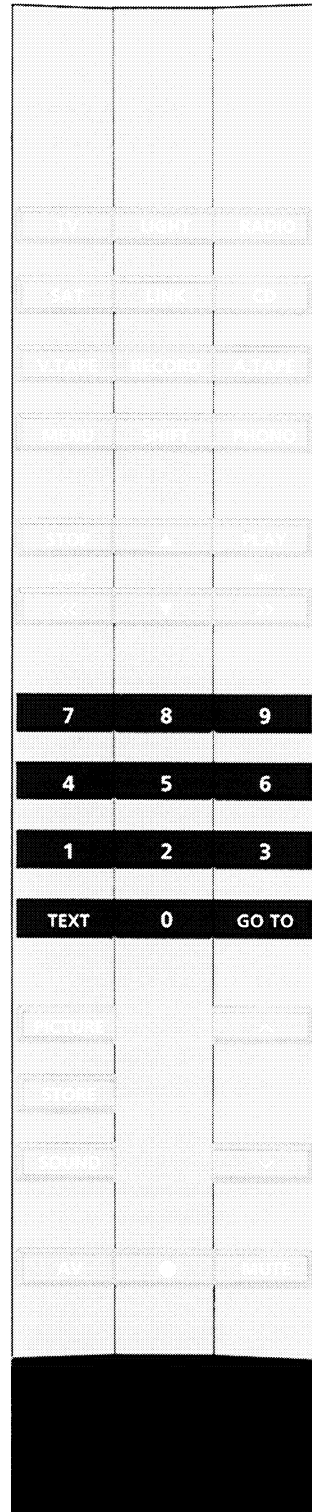

## Picture and sound control - Switching off

The lower group of buttons is for adjusting picture and sound levels, and for switching off.

**PICTURE** Accesses the picture adjustment functions - press  $\wedge$  or  $\vee$  to adjust

**STORE** Accesses the storing function

To store the current picture or sound levels, press **PICTURE** or **SOUND**, then **STORE** twice

**SOUND** Accesses the sound adjustment functions - press  $\wedge$  or  $\vee$  to adjust

$\wedge$  Raises the volume

$\vee$  Lowers the volume

**AV** This button shifts the sound control from the audio system to the video system, and vice versa

 
> for example, if you were last addressing the audio system and you want to lower the volume in the TV speakers, you press **AV**, then  $\wedge$  or  $\vee$

$\bullet$  Switches off the audio or video system

Hold down the button (or press **SHIFT** first) to switch off the entire audio/video system

**MUTE** Mutes and demutes the speakers


**SHIFT**, then **MUTE** resets the picture and sound levels

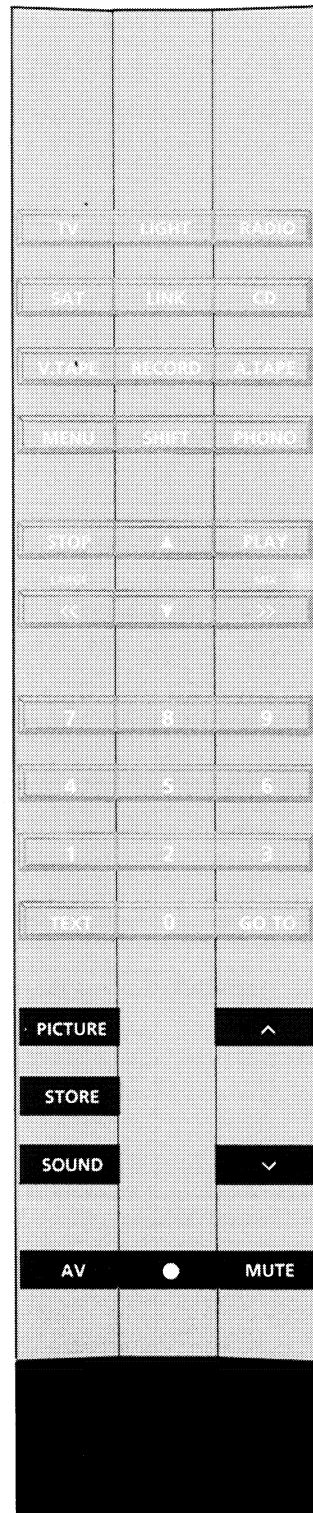

## Teletext

The buttons high-lighted here are used to operate the various teletext functions:

 
- TEXT** Switches to teletext
- ▲** Steps through the memory pages  
or  
**▼**
- GO TO** Press GO TO, then use the number buttons to select a specific teletext page
- LARGE**  
**<<** Enlarges the text in the upper half of the screen
- Press a second time to enlarge the text in the lower half of the screen - press again to return to normal size*
- MIX**  
**>>** Superimposes the TV picture on the teletext page
- Press again to remove the TV picture*
- STOP** Halfs the current page
- Press again to release the page*
- PLAY** Reveals concealed text
- Press again to conceal the text*

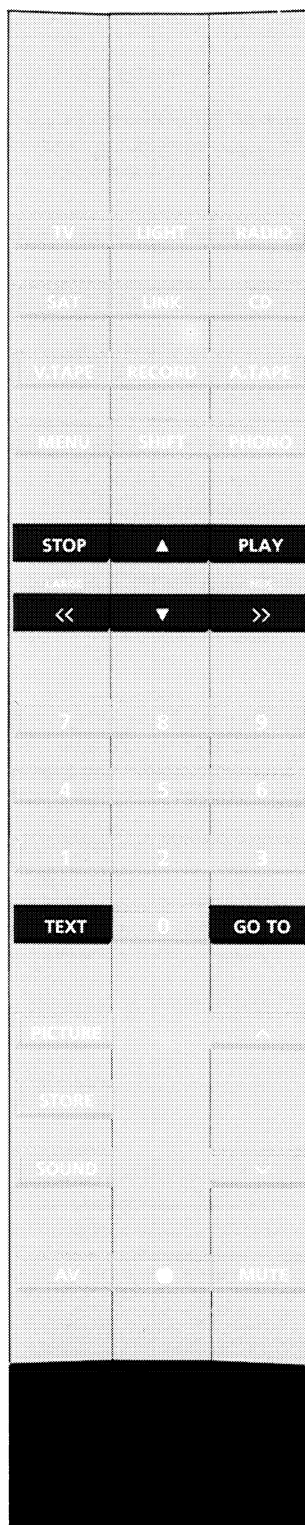

## Operating the on-screen menus

The buttons high-lighted here are used to operate the on-screen menus, for example for timer programming of the video tape recorder:

 - MENU** Calls up the on-screen menu
- You will see the main menu of the source you have last selected*
- <<** High-lights the previous item in the menu
- >>** High-lights the next item in the menu
- ▲** Reveals the other options, if any, available under the high-lighted item  
or  
**▼**
- STOP** Reverses through the menu pages - without storing any new information or without selecting a specific function
- To remove the menu immediately - without storing any new information or without selecting a specific function, select the source you want to see, for example V.TAPE*
- PLAY** Selects the high-lighted item
- Accepts (and stores) the page, including any new information

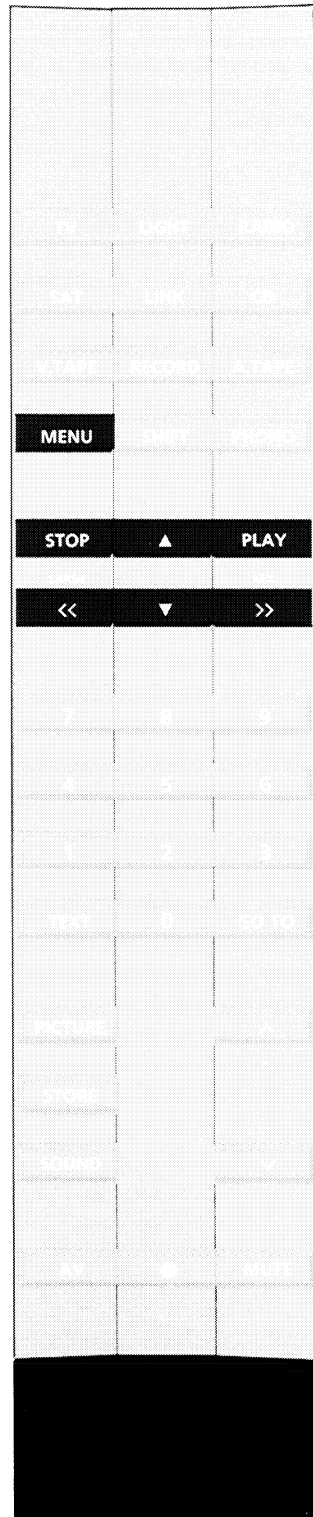

*Note: You will find that this Beolink 1000 terminal does not possess a button marked TURN, as does the former Beolink 1000 terminal. To carry out functions which can be obtained by pressing TURN on the former Beolink 1000, you must instead press SHIFT, SOUND on this Beolink 1000 terminal.*



## International guarantee

This Bang & Olufsen product carries a guarantee against defects in workmanship and materials. The terms of the guarantee apply to the country of purchase but will be met by authorized Bang & Olufsen dealers in other countries. The guarantee period applying to the country of purchase takes priority over guarantee periods applying in other countries, even where differences exist.

In order to obtain service under this guarantee, a certificate stating the following information is required:

- Name of product and type number
- Serial number
- Date of purchase
- Guarantee period
- Dealer's or supplier's signature