

BANG & OLUFSEN

BeoLink Converter NL/ML

Version : 1.4.2.19611

Date : Sep 25 2015

NL alias : BeoLink Converter
NL/ML

ML role : V Master

Setup

Sources visible on ML		
ML source	NL product name	NL source
TV	Empty ▾	Empty ▾
DTV	Empty ▾	Empty ▾
DTV2	Empty ▾	Empty ▾
V.MEM	Empty ▾	Empty ▾
DVD	Empty ▾	Empty ▾
DVD2	Empty ▾	Empty ▾
CAMERA	Empty ▾	Empty ▾
V.AUX2	Empty ▾	Empty ▾
PC	Empty ▾	Empty ▾
RADIO	Empty ▾	Empty ▾
A.MEM	Empty ▾	Empty ▾
CD	Empty ▾	Empty ▾
A.AUX	Empty ▾	Empty ▾
N.RADIO	Empty ▾	Empty ▾
N.MUSIC	Empty ▾	Empty ▾

Disabled due to ML role


Save

Experience mapped to NL

ML source	Name used on NL	Enabled
TV	TV	☒
DTV	DTV	☒
DTV2	DTV2	☒
V.MEM	V.MEM	☒
DVD	DVD	☒
DVD2	DVD2	☒
CAMERA	CAMERA	☒
V.AUX2	V.AUX2	☒
PC	PC	☒
RADIO	RADIO	☒
A.MEM	A.MEM	☒
CD	CD	☒
A.AUX	A.AUX	☒
N.RADIO	N.RADIO	☐
N.MUSIC	N.MUSIC	☐

Disabled due to ML role

Save

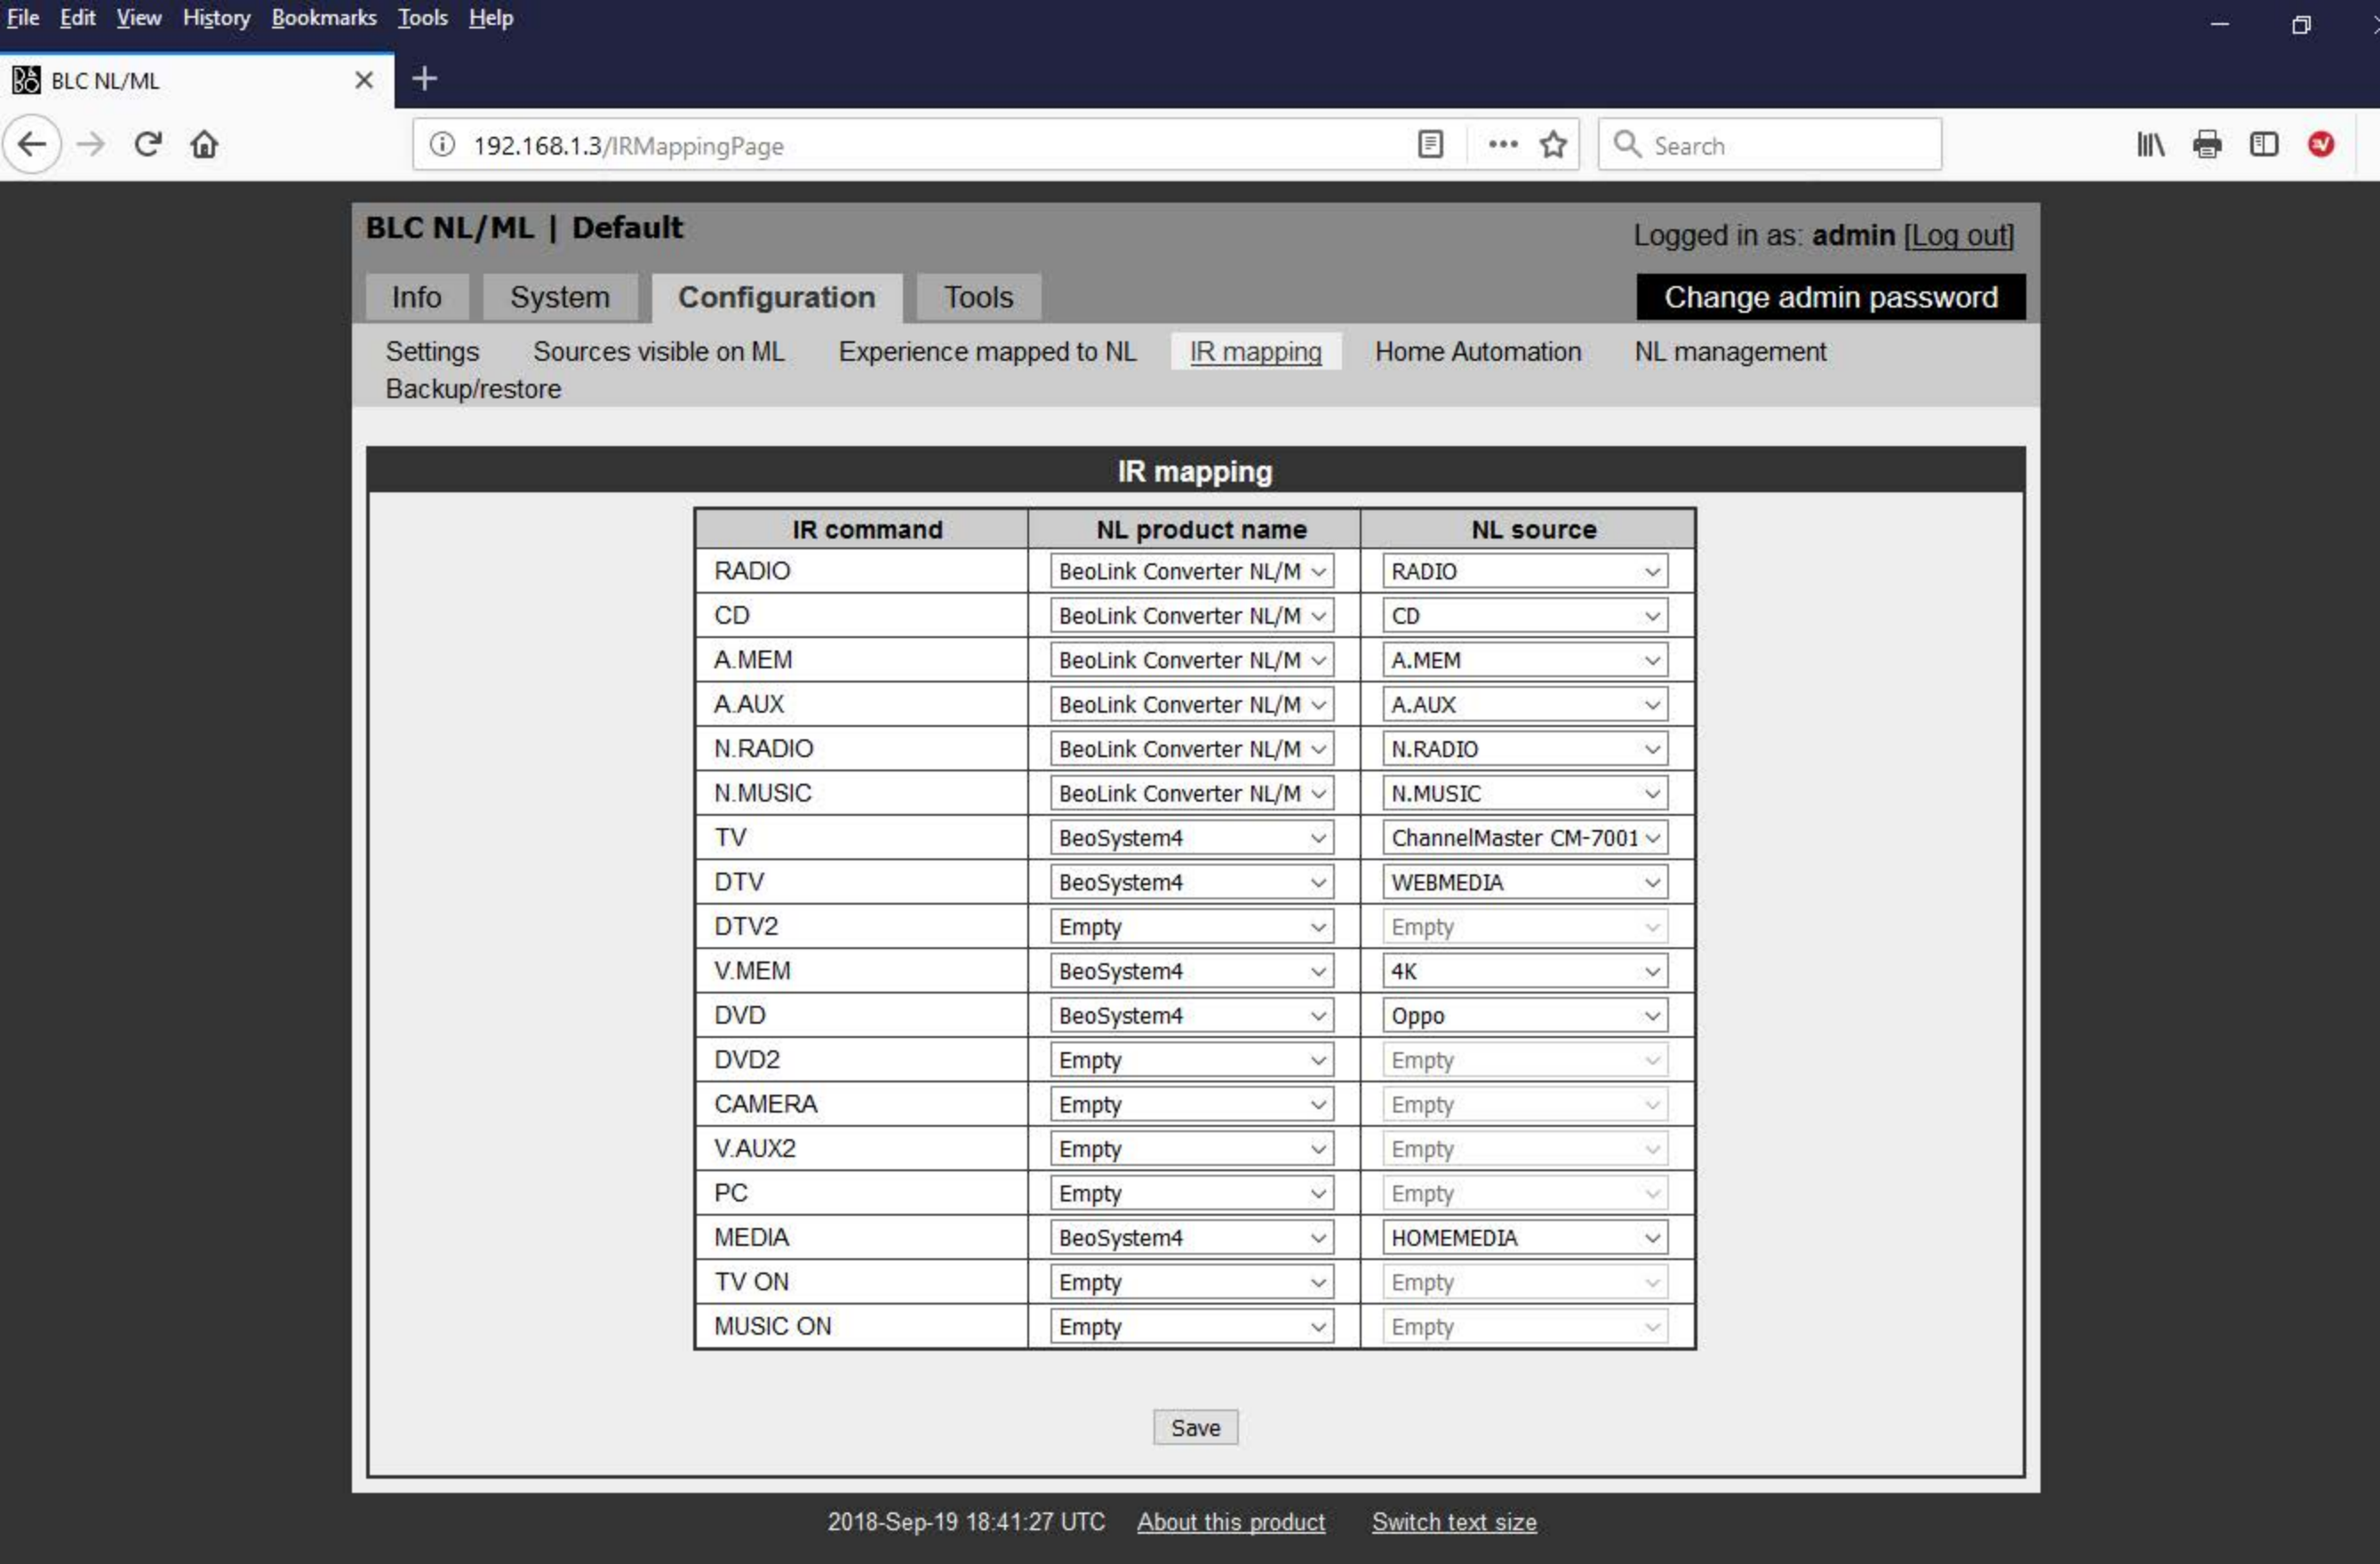

BLC NL/ML | Default

Logged in as: admin [Log out]

Info

System

Configuration

Tools

Change admin password

Settings

Sources visible on ML

Experience mapped to NL

IR mapping

Home Automation

NL management

Backup/restore

IR mapping

IR command	NL product name	NL source
RADIO	BeoLink Converter NL/M	RADIO
CD	BeoLink Converter NL/M	CD
A.MEM	BeoLink Converter NL/M	A.MEM
A.AUX	BeoLink Converter NL/M	A.AUX
N.RADIO	BeoLink Converter NL/M	N.RADIO
N.MUSIC	BeoLink Converter NL/M	N.MUSIC
TV	BeoSystem4	ChannelMaster CM-7001
DTV	BeoSystem4	WEBMEDIA
DTV2	Empty	Empty
V.MEM	BeoSystem4	4K
DVD	BeoSystem4	Oppo
DVD2	Empty	Empty
CAMERA	Empty	Empty
V.AUX2	Empty	Empty
PC	Empty	Empty
MEDIA	BeoSystem4	HOMEMEDIA
TV ON	Empty	Empty
MUSIC ON	Empty	Empty

Save

- Info
- System
- Configuration**
- Tools

Change admin password

- Settings
- Sources visible on ML
- Experience mapped to NL
- IR mapping
- Home Automation
- NL management
- Backup/restore

Telegram forwarding

Forward LIGHT/CONTROL commands

☐

Device

BeoSystem4

▼

Save

NL delay

Network delay, wired50(50..10000 ms)

Network delay, wireless1000(50..10000 ms)

ML delay setting143ms

Save

NL products

Type.Item.Serial	Name	Wired/Wireless	Remove
0000.00000000.000000000	BeoLink Converter NL/ML	WIRED	☐
1790.1179011.24687437	BeoLink Converter NL/ML	WIRED	☐
9667.1856455.24522256	BeoSystem4	WIRED	☐

Remove

BLC NL/ML | Default

Logged in as: admin [Log out]

InfoSystemConfigurationTools

Change admin password

Software updateSystem logReport

Software status

Current version1.4.2.19611[release notes]

Available version

Update statusUnknown

Check available versionUpdate

Automatic update

☒ Enabled (Recommended)

☐ Disabled

☒ By accepting this (Enable and Save), you consent to allowing your system to automatically check and install new software updates. Bang & Olufsen a/s (B&O) will provide your equipment with new software when deemed reasonable by B&O.

The software updates provided by B&O are all provided with the purpose of improving your equipment, including to provide you with new and additional functionality, and/or to correct malfunctions. You may be informed about changes in the individual updates, the first time you switch on your products after a successful software update.

Disable and press Save if you no longer wish to consent to the above. Please note that rejecting to the above-mentioned, may limit your ability to use certain functions.

Save

Usage patterns

Allow Bang & Olufsen to collect usage statistics

☐ Enabled

☒ Disabled

☐ Help make Bang & Olufsen products better by automatically sending usage statistics and error reports to Bang & Olufsen a/s (B&O).

By accepting this (Enable and Save), you consent to allowing your product to send usage statistics and error reports to Bang & Olufsen a/s. The information sent to B&O will be used by B&O for various purposes all with the aim of improving B&O's products. In particular the information will be used by B&O to correct and/or prevent errors in your equipment, just as the information will be used by B&O to generate usage patterns, enabling Bang & Olufsen to improve the general performance of products in connection with future development and updates.

Disable and press Save if you no longer wish to consent to the above

Save

2018-Sep-19 18:43:40 UTC

About this product

Switch text size

Info

System

Configuration

Tools

Change admin passwordProduct info

Project info

SW versions

Service counters

Product IDSerial number **24687437**Item number **1179011**Type number **1790****Product HW info**Name **BeoLink Converter NL/ML**HW variant **Version F****SmallEngine HW info**HWID **0**PCB version **E**Variant **8004752**BOM version **K**Configuration word **2120**

[Info](#)[System](#)[Configuration](#)[Tools](#)[Change admin password](#)[Product info](#)[Project info](#)[SW versions](#)[Service counters](#)

SW versions

Build	1.4.2.19611
Main application	1.46.i
SmallEngine	2.8.2
H8	1.37a
FEP	1.7.a

Service counters

Counter	Value
[ID1] SW update allowed >>	Enabled
[ID2] SW update status	Enabled
[ID3] Usage Pattern Collection allowed	Disabled
[ID4] Usage Pattern Collection status	Disabled
[ID1000] On/Off	15
[ID10000] Min temperature	22
[ID10001] Max temperature	39
[ID1002] Total stand-by time	1405345
[ID1001] Total on time	2583
[ID1100] Temperature threshold	0
[ID1101] Temperature threshold shutdown	0
[ID1104] SW update failed	0
[ID1106] RAM threshold critical	0

Id ID1

Name SW update allowed

Description Customer acceptance of software update

Time 2010-Oct-10 10:13:32.648879

Unit data

Value Enabled

[Info](#)[System](#)[Configuration](#)[Tools](#)[Change admin password](#)[Network](#)[Date&Time](#)[Password](#)

Time zone

Time zone

MasterLink clock synchronizing

Push time to MasterLink products ☐

[Info](#)[System](#)[Configuration](#)[Tools](#)[Network](#)[Date&Time](#)[Password](#)

Change password

Enter current password

Enter new password

Confirm new password

You must log in with your new password after change.

BLC NL/ML | Default

Logged in as: admin [Log out]

InfoSystemConfigurationTools

Change admin password

SettingsSources visible on MLExperience mapped to NLIR mappingHome AutomationNL managementBackup/restore

MasterLink

ML enabled☒

ML roleV Master

Save

IR

IR option2

Save

NetworkLink

Friendly name in NLBeoLink Converter NL/ML

Connect to (primary)BeoLink Converter NL/ML

Connect to (secondary)BeoLink Converter NL/ML

Save

App Settings

Friendly name in AppsBeoLink Converter NL/ML

Product controlled by AppsML Audiomaster

Icon shown in AppsBeoLinkConverter NL/ML

Save

PowerLink

Default volume40(0..60)

Enable line-in sense☐

Line-in volume adjustment

☒ Offset (steps)0DownUp

☐ Fixed level40DownUp

Speaker on delay on line-in sense50(50..10000 ms)

Speaker off delay on line-in sense180(1..900 s)

Save

2018-Sep-19 18:39:08 UTC

[About this product](#)

[Switch text size](#)